CL-P0114

Big Typhoon

Parts List >>

H Clip x 2
Sponge X 1
Mylar X 1
Nut x 4
Washer x 4
Standoff x 4
Screw A x 4
Screw B x 2

Before Installation >>

Apply a thin layer of thermal grease on the CPU die.
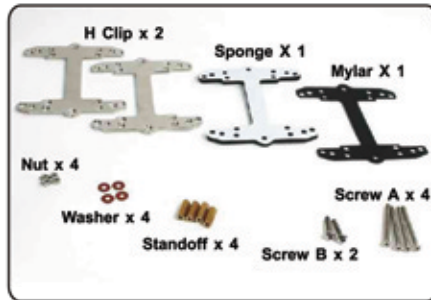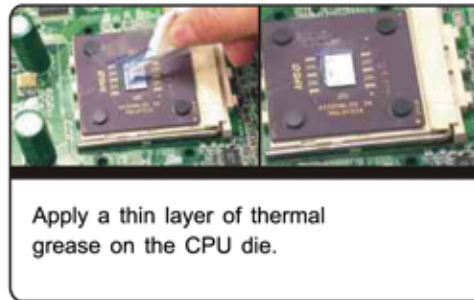
LGA775/P4/K7 Installation

H Clip x 2
Mylar X 1
Sponge X 1

Screw A x 4
Washer x 4
Standoff x 4
Nut x 4
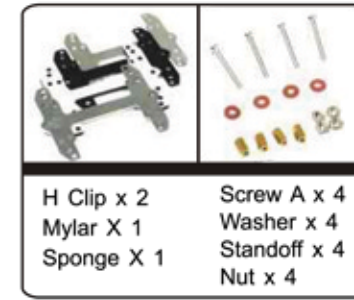
Note:
1. Parts needed for Intel P4 socket 478, LGA 775 and AMD K7 installation.
2. If installing on a AMD K8 processor, please refer directly to section " K8 Installation".

> > 1. Install the back plate

Peel off one side of tape from the sponge.

> Adhere the sponge to the back of motherboard, make sure the sponge's mounts are aligned to motherboard's.

> Peel the other side of tape from the sponge.

> Adhere the Mylar to the sponge, make sure the mounts are aligned.

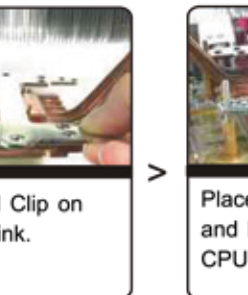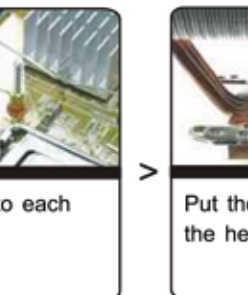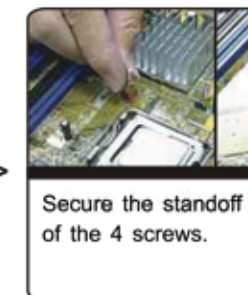> Place the "H" Clip onto the Mylar.

Note:
If upon boot up, the screen pauses due to a "CPU fan error" or similar message, please disable the CPU fan speed monitoring under the hardware monitoring section of your motherboard's BIOS.
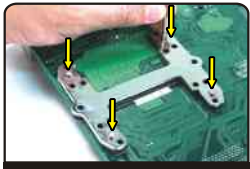
> > 2. Install the heatsink

LGA775 Installation >>

Put 4 screws through the mounts.

> Turn over the motherboard and then slip on the washer.

> Secure the standoff onto each of the 4 screws.

> Put the H Clip on the heatsink.

> Place the heatsink and H clip over the CPU.

> Make sure to securely tighten the nuts over the screws.

Thermaltake
CooLall Your Life

www.thermaltake.com **REVISION A.2004.12**

Installation

P4 Installation >>

 > > > > >

| Put 4 screws through the mounts. | Turn over the motherboard and then slip on the washer. | Secure the standoff onto each of the 4 screws. | Put the H Clip on the heatsink. | Place the heatsink and H clip over the CPU. | Make sure to securely tighten the nuts over the screws. |

K7 Installation >>

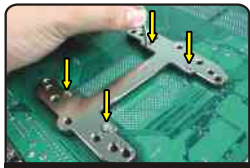| Put 4 screws through the mounts. | Turn over the motherboard and then slip on the washer. | Secure the standoff onto each of the 4 screws. | Put the H Clip on the heatsink. | Place the heatsink and H clip over the CPU. | Make sure to securely tighten the nuts over the screws. |

K8 Installation >>

Note:
Do not remove the back plate retention on your K8 Motherboard.

| H Clip x 1 Screw B x 2 | Put the H Clip on the heat sink. | Place the heat sink unit on the CPU as shown in the picture. | Secure the screws to the mount of M/B as show in the picture. |

Fan Connection >>

| Connect the 3 pin wire to the motherboard's fan connector. |

Thermaltake
COOL all YOUR LIFE

www.thermaltake.com **REVISION A.2004.12**